

**Airworthiness Directive**  
**AD1996.01**

TORQUE TUBE AND CROSS BAR ANTI CRUSH SPACER

An anti-crush bush must be installed inside the rotor-head cross tube and torque tube.

David Jackson  
Operations Manager