

Airworthiness Directive

AD 1996.01

TORQUE TUBE AND CROSS BAR ANTI CRUSH SPACER

An anti-crush bush must be installed inside the rotor-head cross tube and torque tube.

David Jackson
Operations Manager

12/1996 page 7 (Summer)